


Einbauanleitung

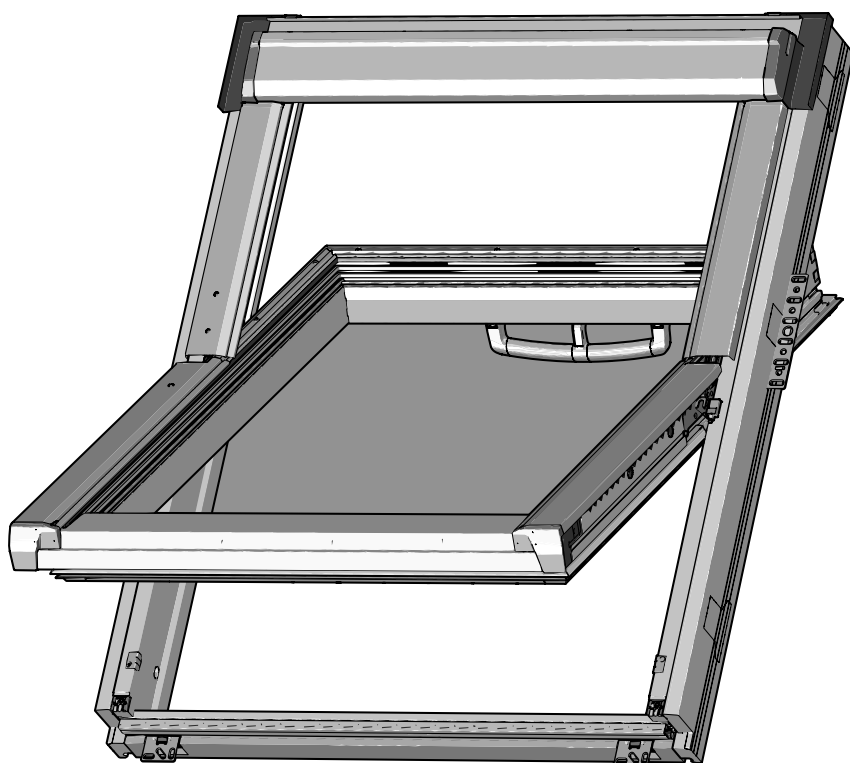

Q4 H/K 200 / Q4 H/K 200 SC

EN Installation manual
FR Instructions de montage
NL Montagehandleiding
IT Guida per il montaggio
ES Instrucciones de montaje
PT Instruções de instalação
PL Instrukcja montażu

CZ Montážní návod
SK Návod na montáž
SI Navodila za vgradnjo
RU Руководство по монтажу
GR Οδηγίες τοποθέτησης
EE Paigaldusjuhend
LV Uzstādīšanas instrukcija

LT Montavimo instrukcija
RO Manual de montare
HU Beépítési útmutató
HR Upute za ugradnju
BG Монтажна инструкция





roto-extra.com

DE Sicherheitshinweise
EN Safety information
FR Indications de sécurité
NL Veiligheidsinstructies
IT Indicazioni sulla sicurezza
ES Indicaciones de seguridad
PT Indicações de segurança
PL Wskazówki bezpieczeństwa
CZ Bezpečnostní pokyny
SK Bezpečnostné pokyny
SL Varnostna navodila


RU Указания по технике безопасности
GR Υποδείξεις ασφαλείας
EE Ohutusjuhised
LV Drošības norādījumi
LT Saugumo instrukcijos
RO Indicații de securitate
HU Biztonsági utasítások
HR Sigurnosne upute
BG Указания за безопасност



	4
	6
	6
	8
	10
	16
	20
	21
	27
	28






Q4 H/K 200

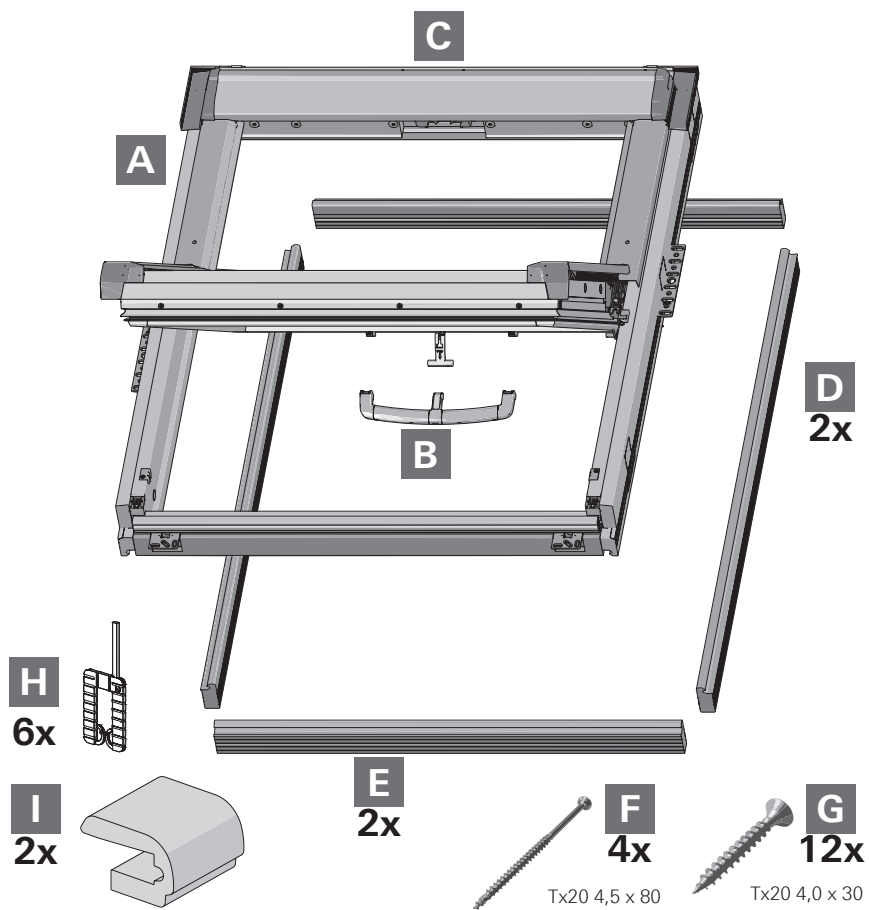



Q4 H/K 200 SC

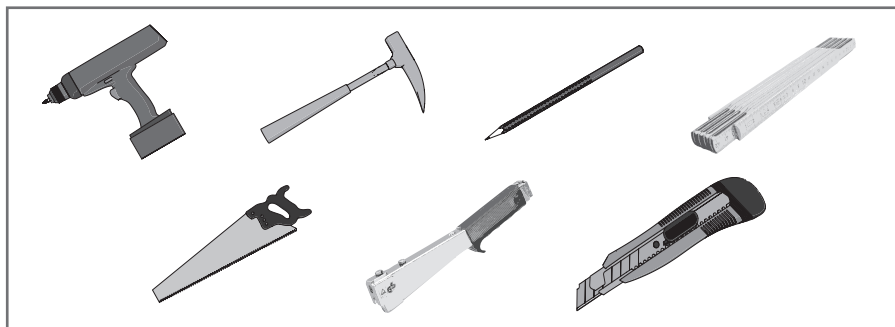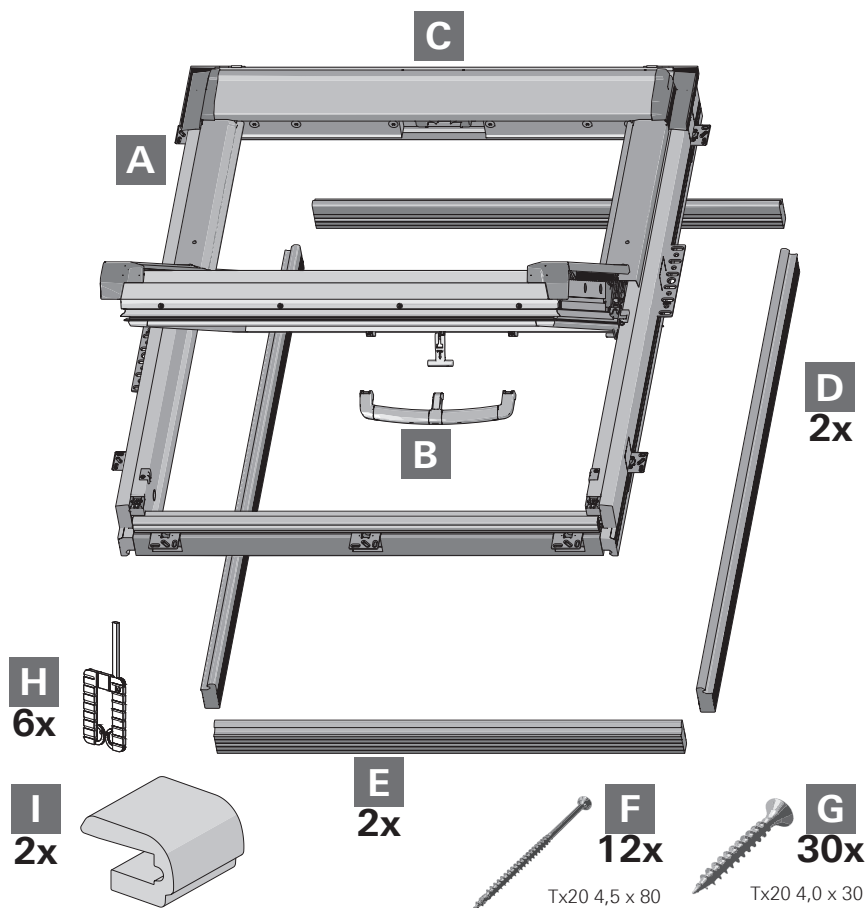

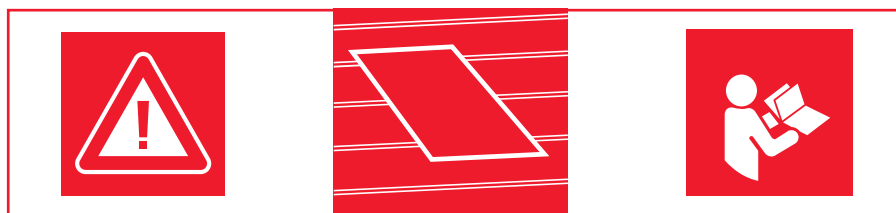


**EDW, EDU, EDS, EDL
EDB, EDP
EDM, EDX, MSB,
EDW AV2, EDL AV2
EDN, EDJ**





**1x2
2x1
2x2**




**AAS
MDA
ASA**

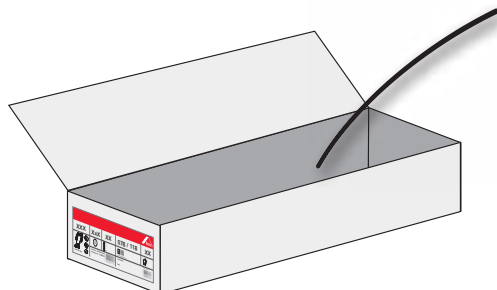


EDW, EDU, EDS

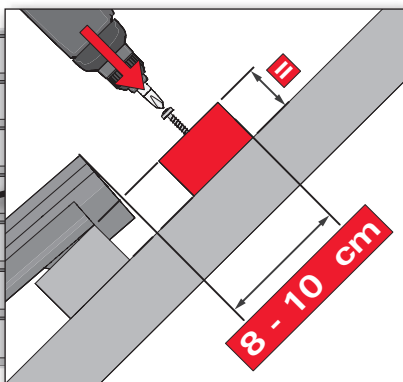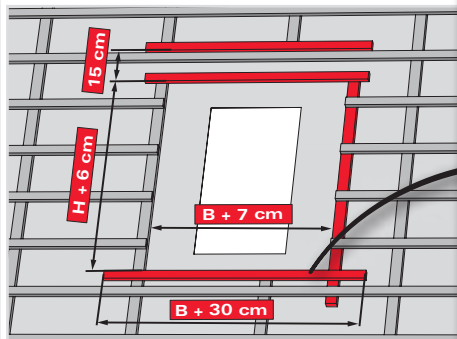

EDS, EDL

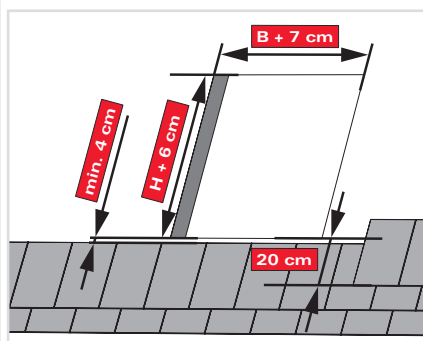

EDB

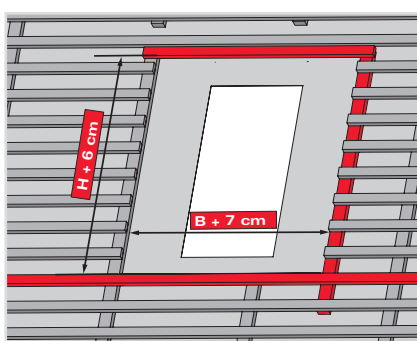


EDW AV2, EDL AV2, EDN, EDJ

Q4 H/K 200


~~Q4 H/K 200 SC~~


AV2

new

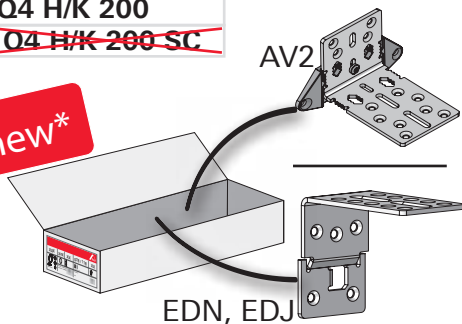





EDN, EDJ

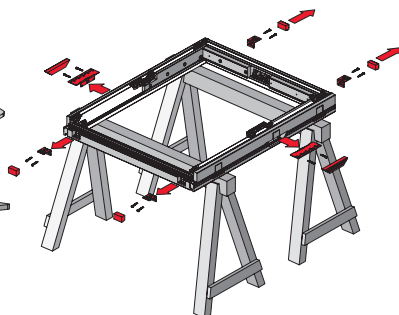

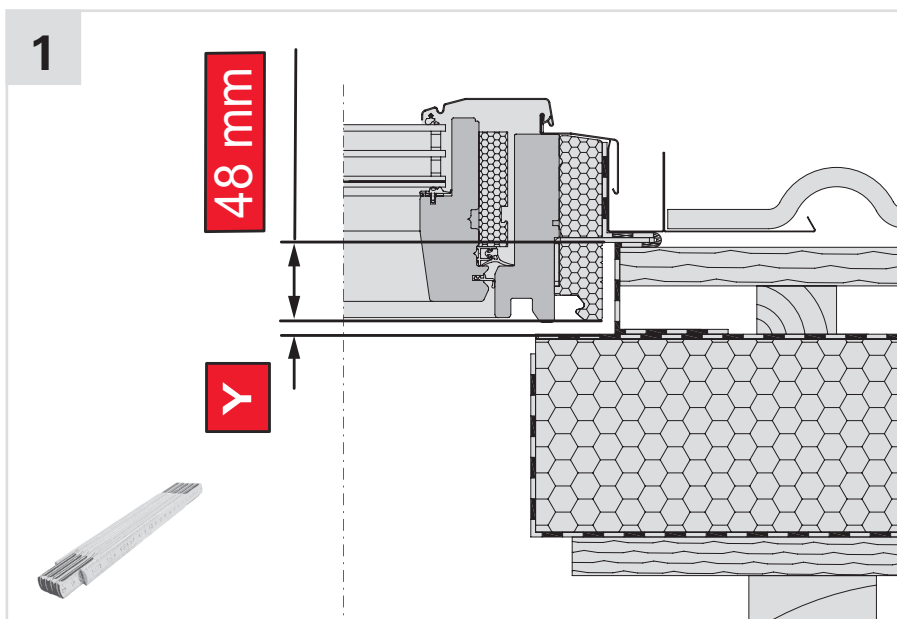




2

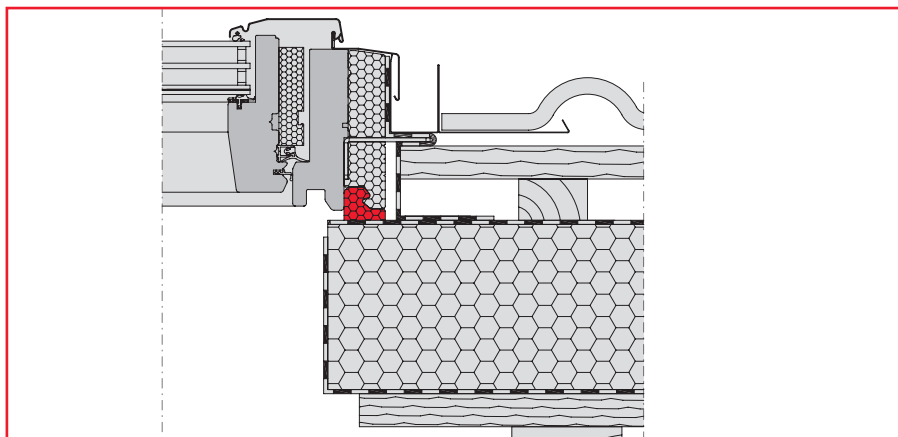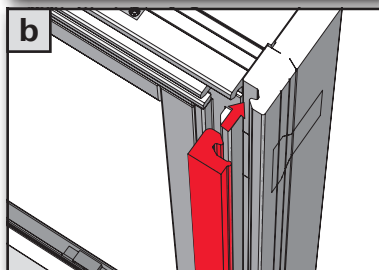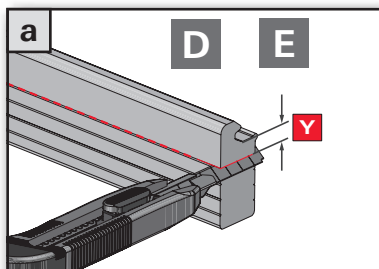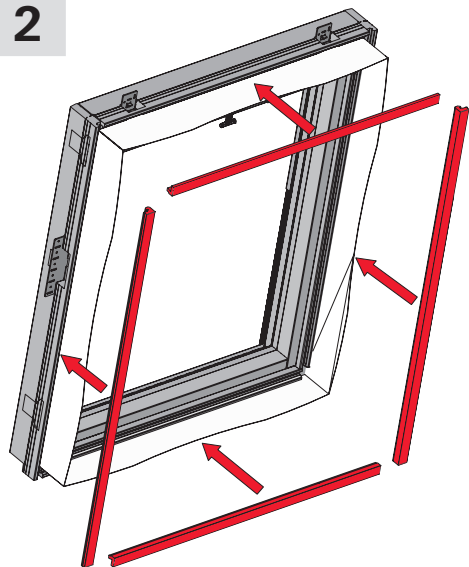




.....10 - 20


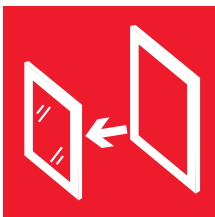





.....16 - 18









1


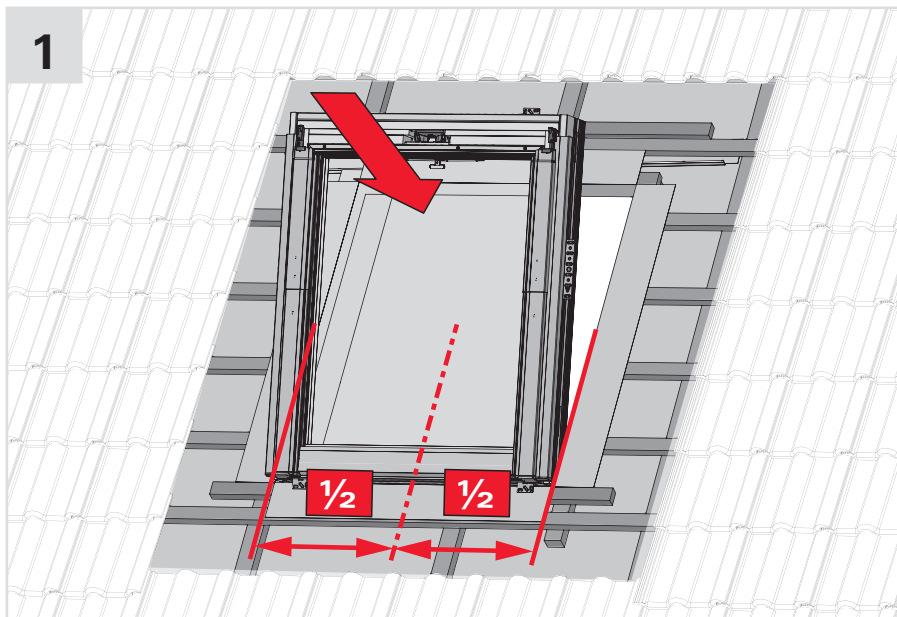


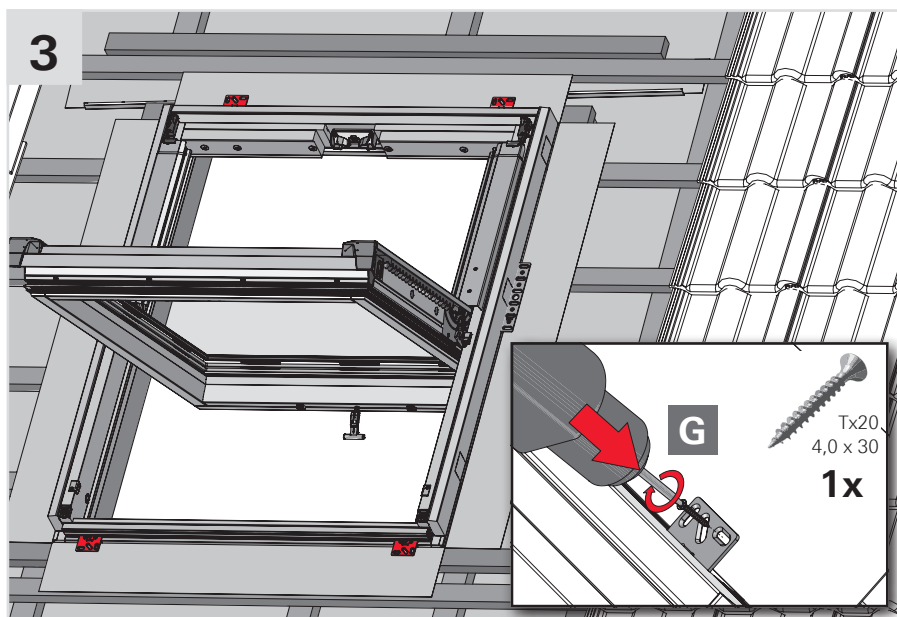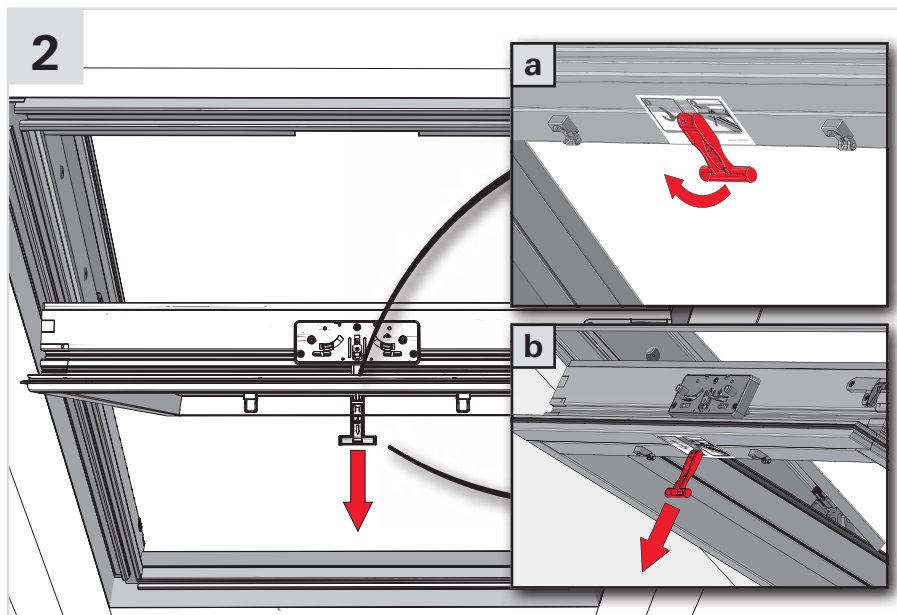

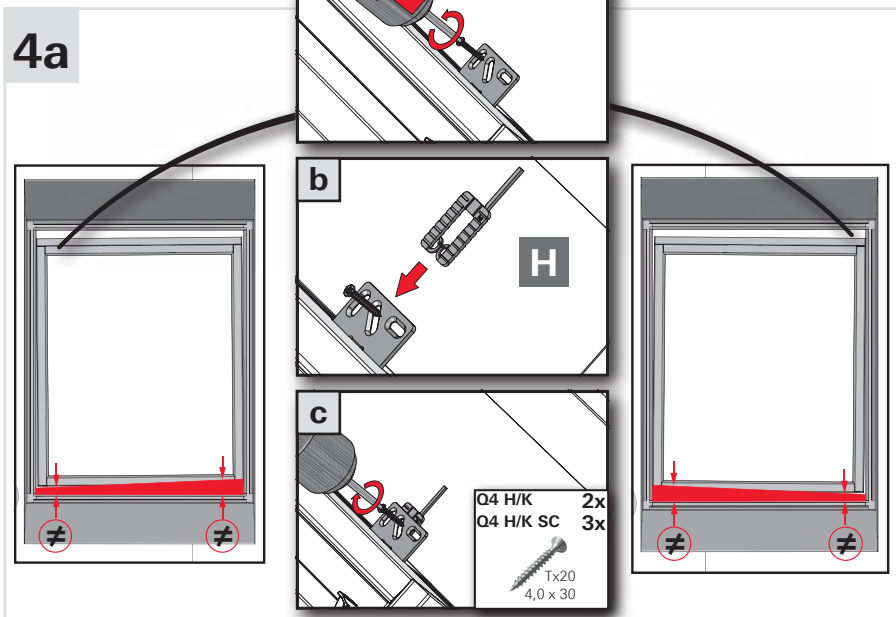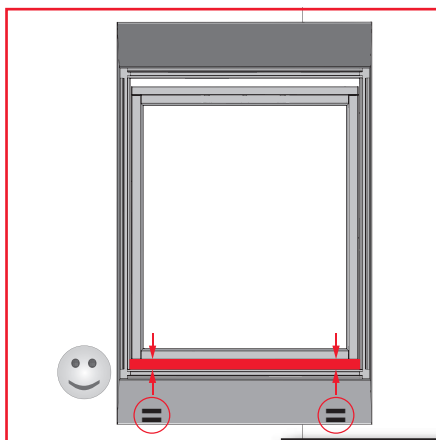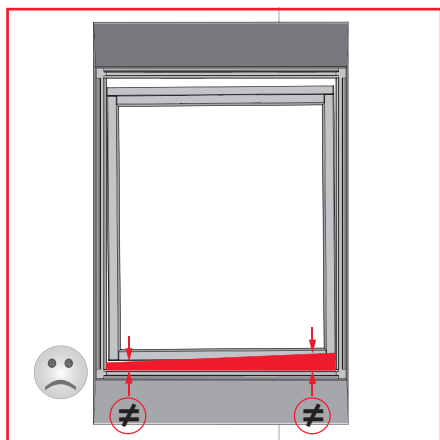

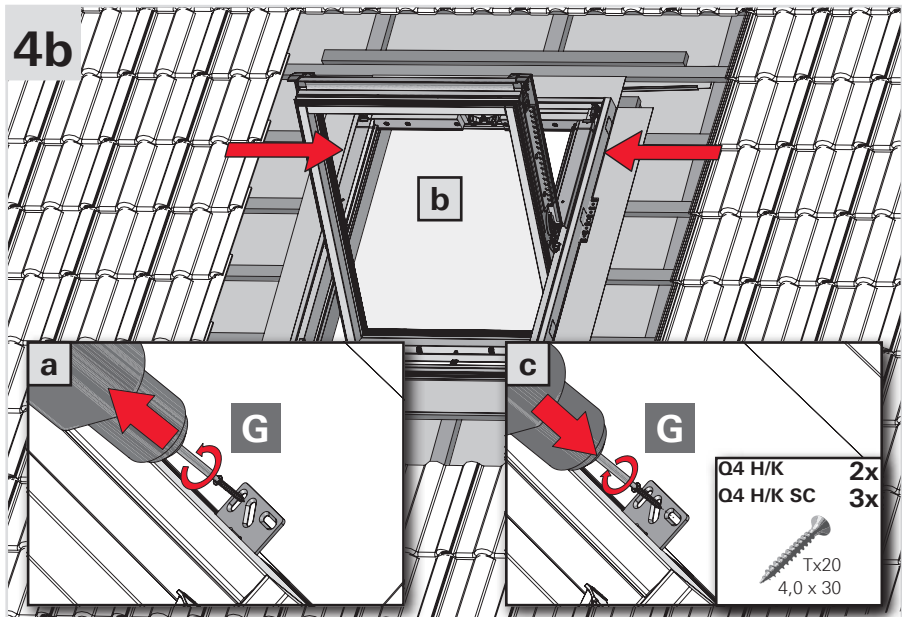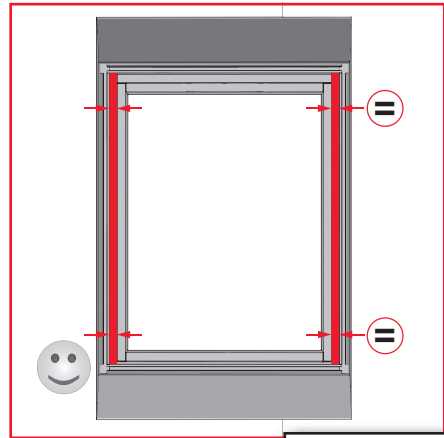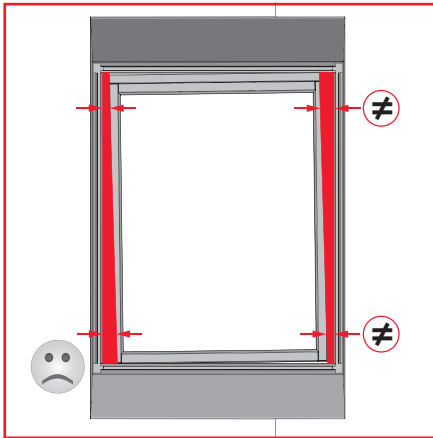


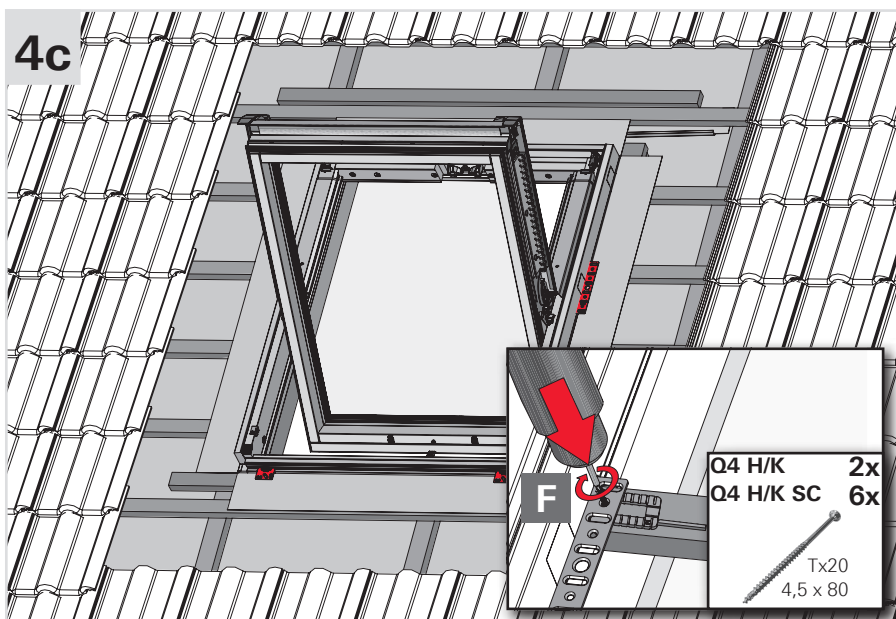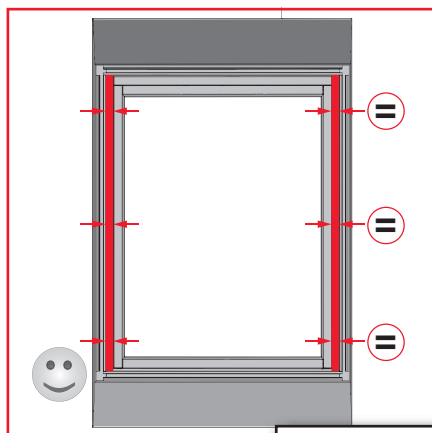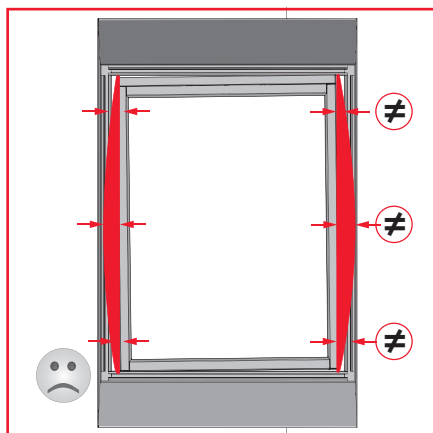

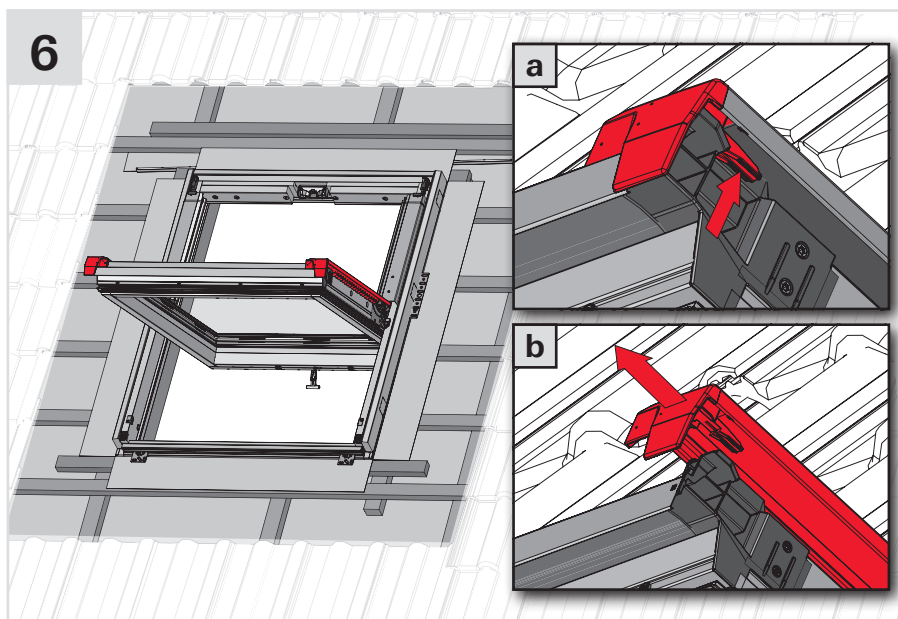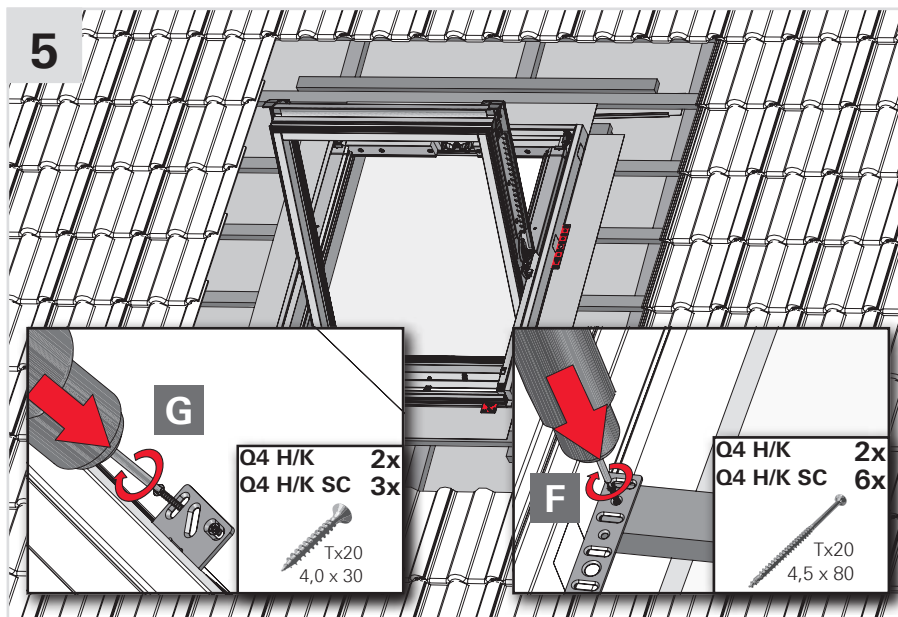






7

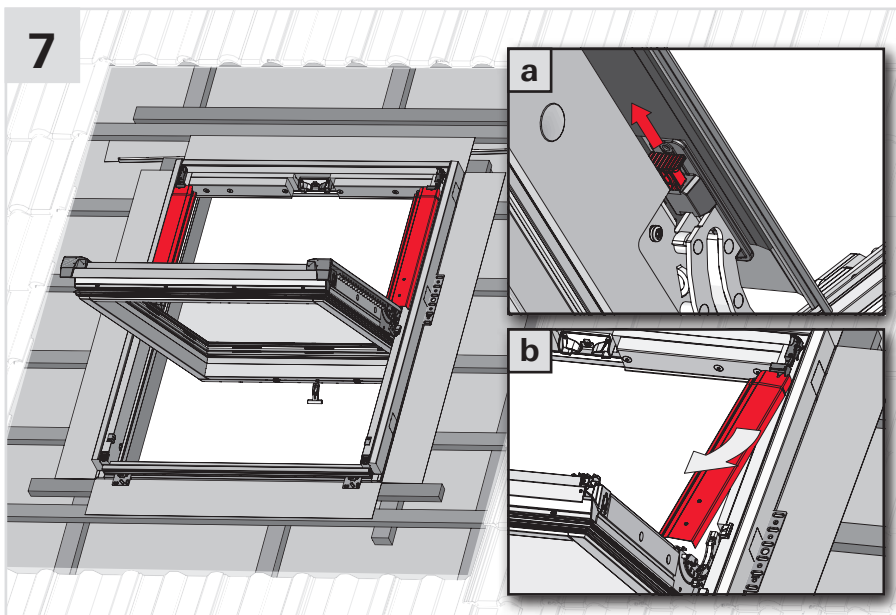


8

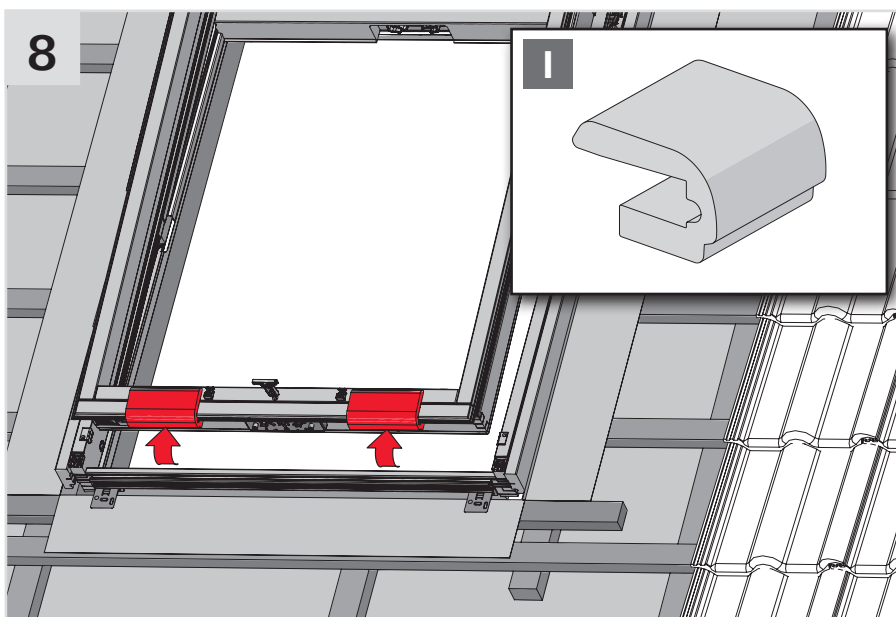

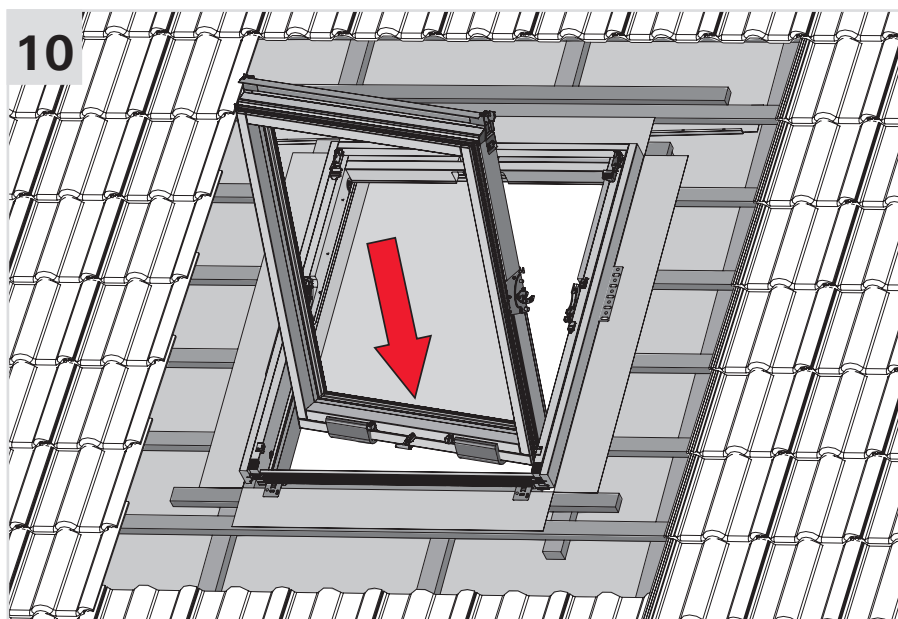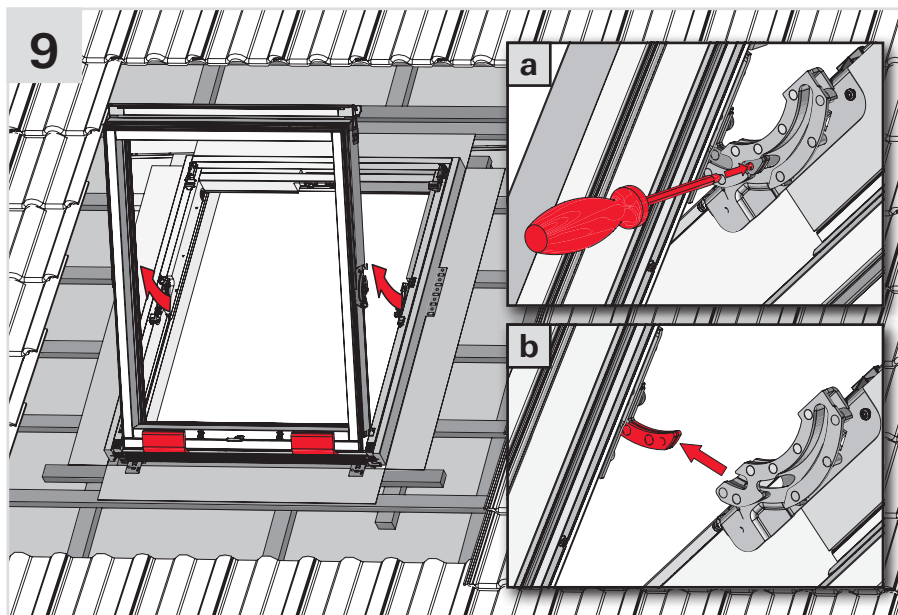








11

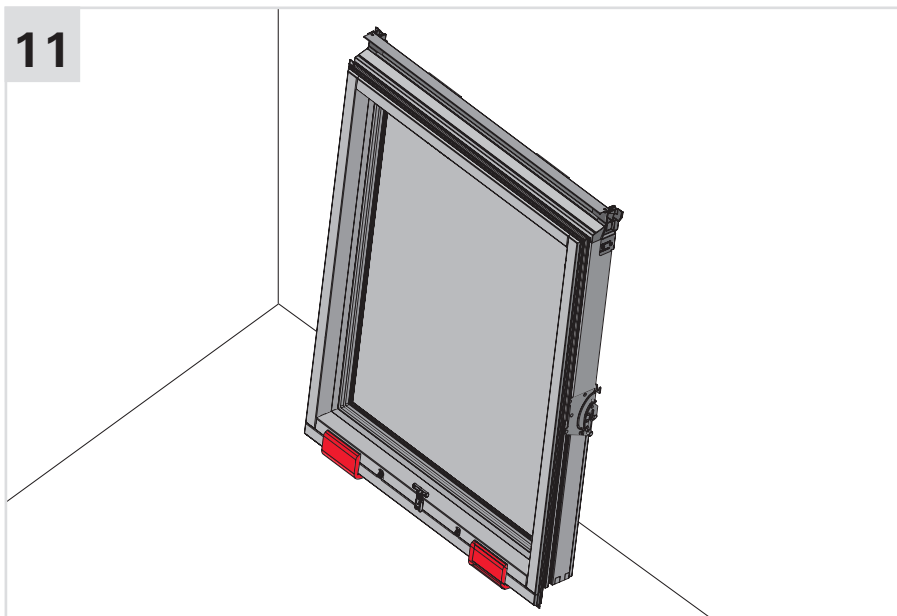

12

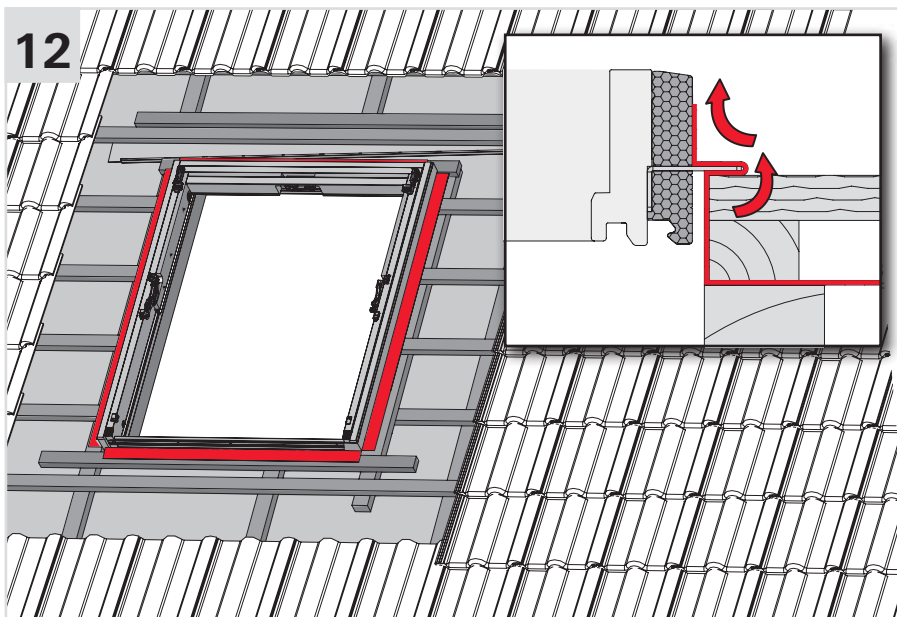

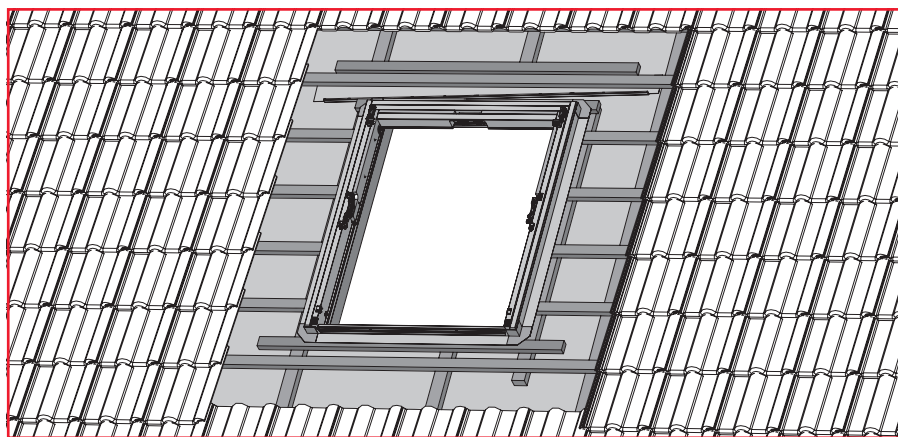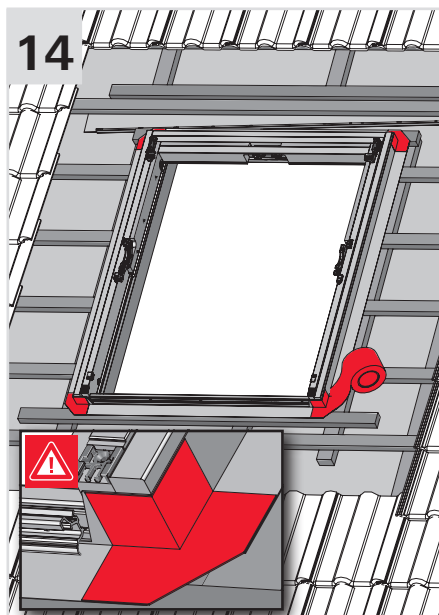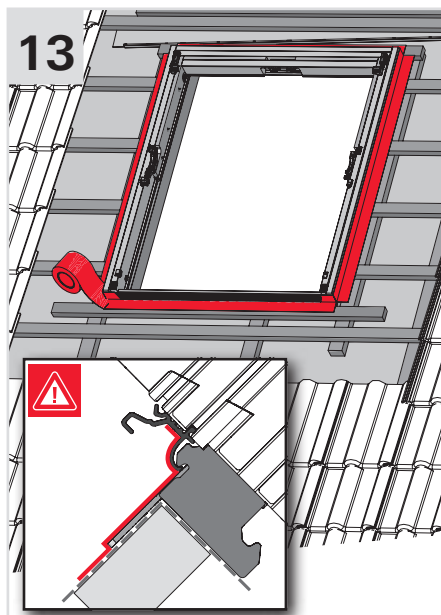

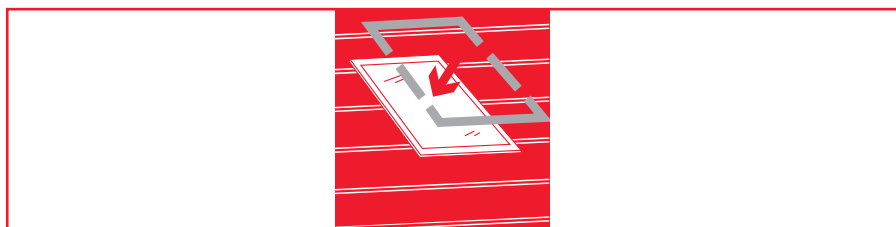


EDW AV2, EDL AV2
EDW, EDS, EDL
EDU, EDB, EDP
EDM, EDX, MSB




1x2
2x1
2x2



AAS
MDA
ASA

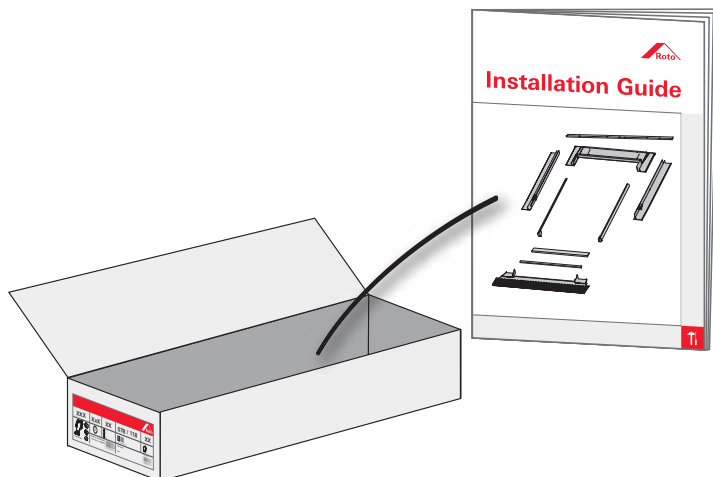


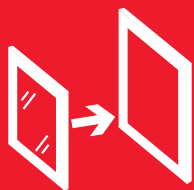

.....21 - 27







.....26 - 27

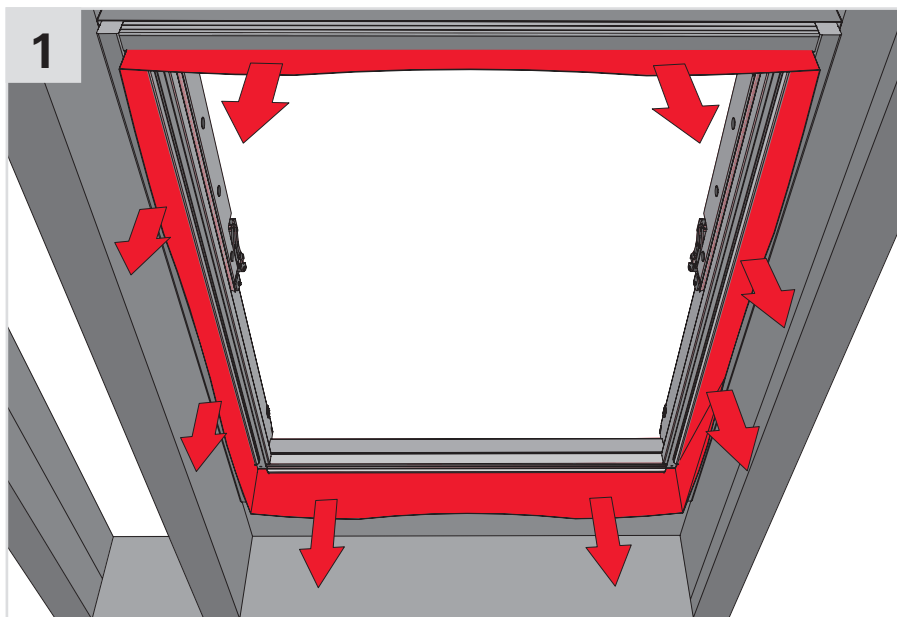




2

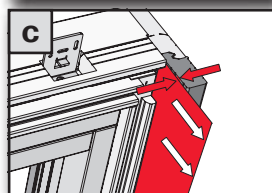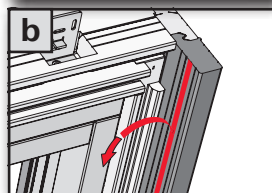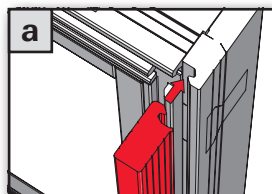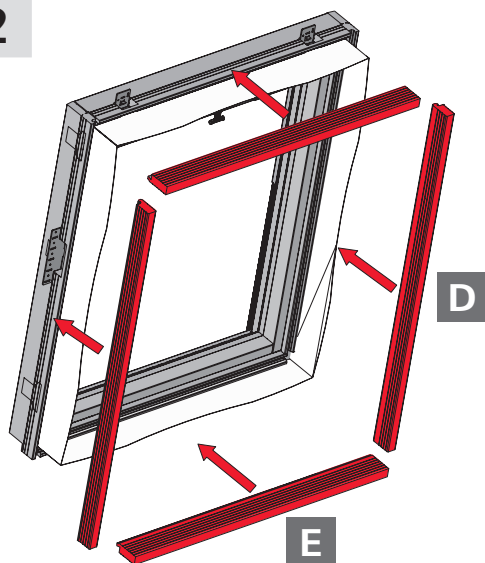


3

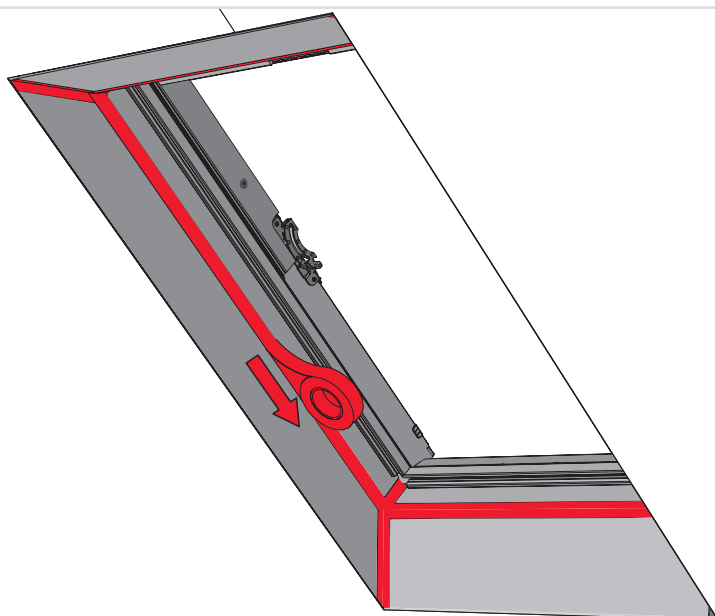








4

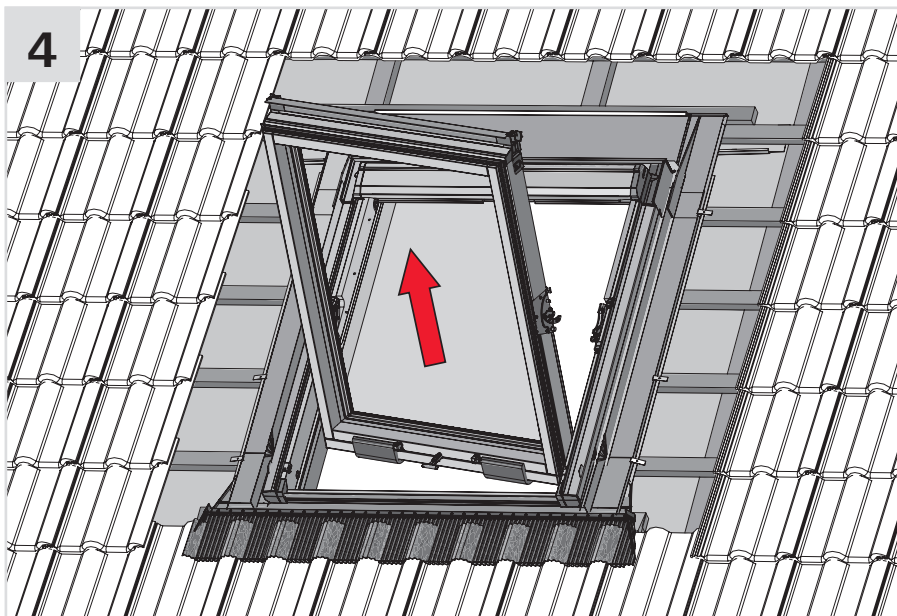

5

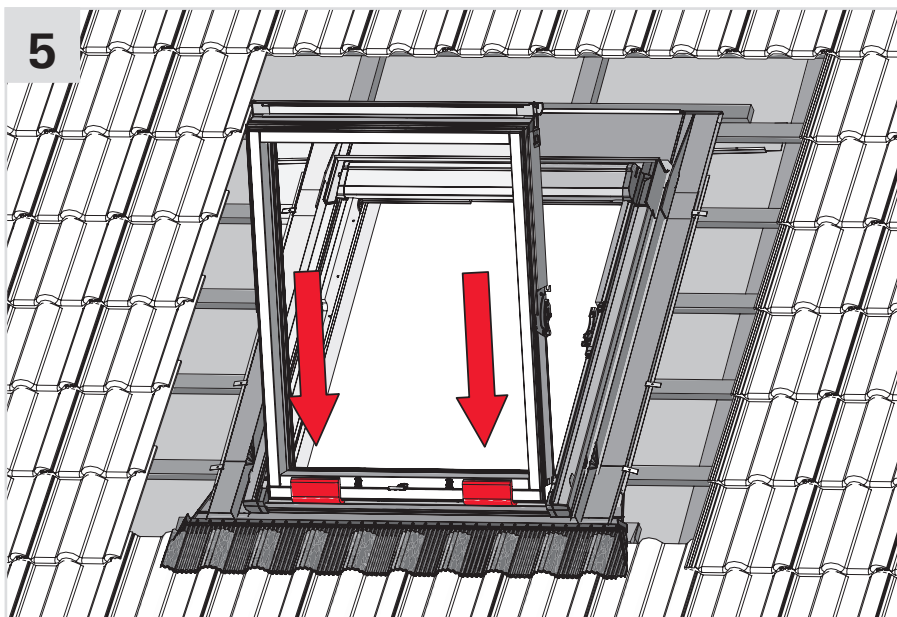


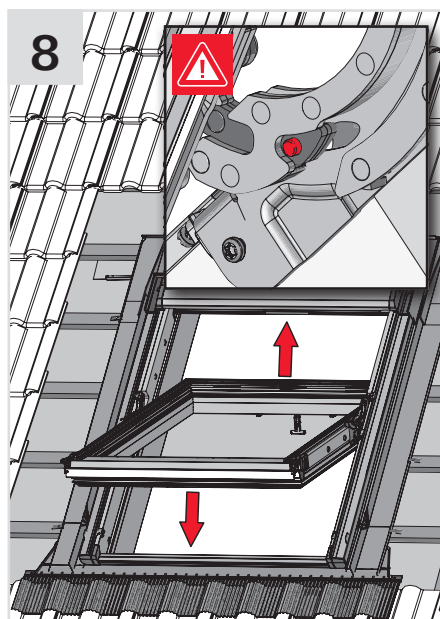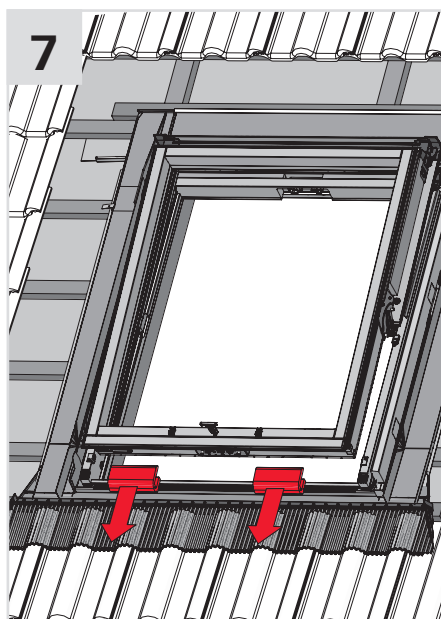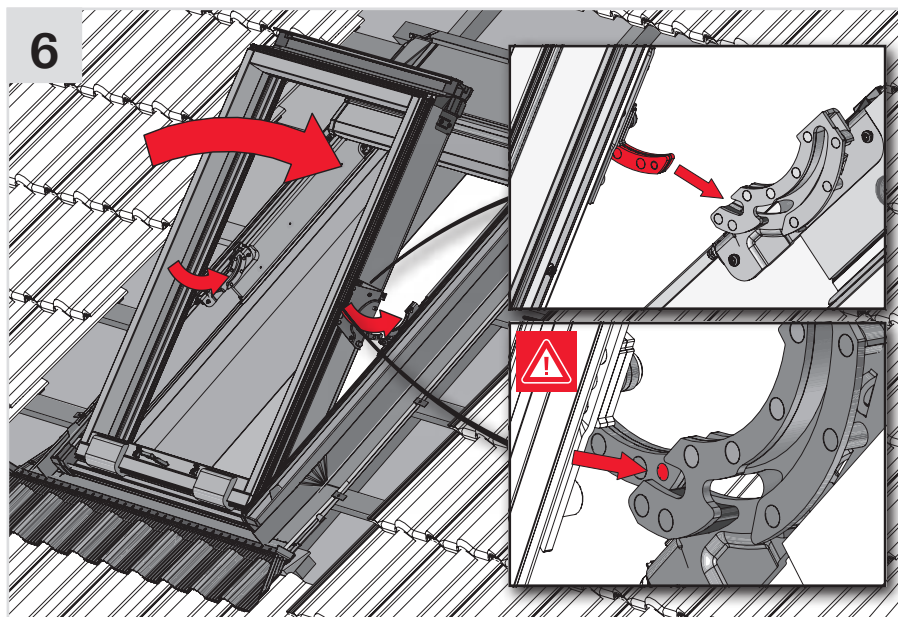

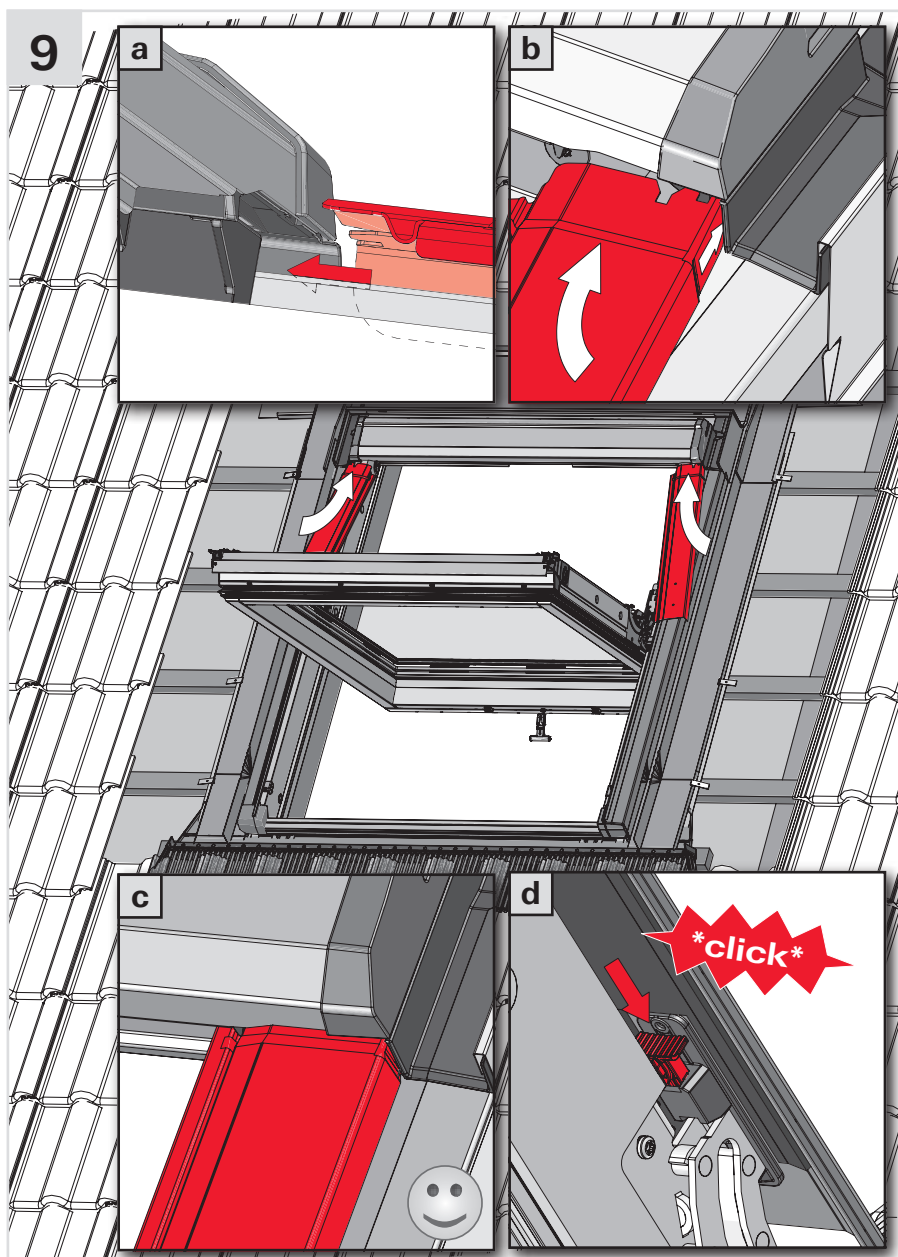








10

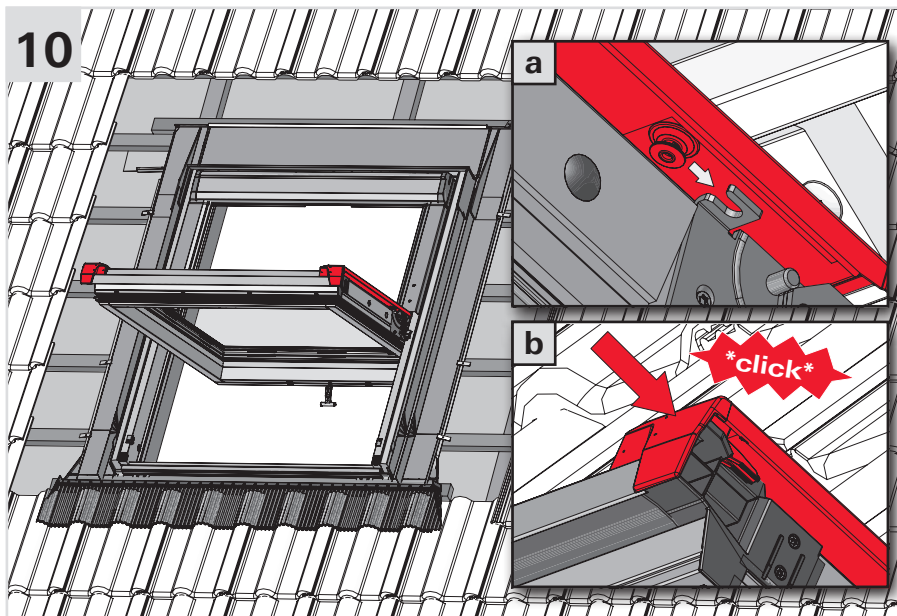

11


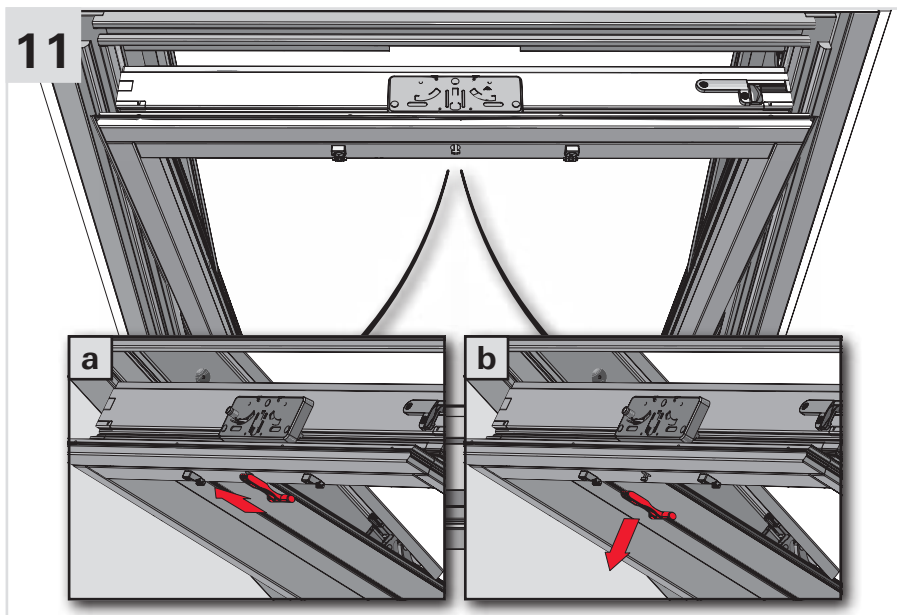


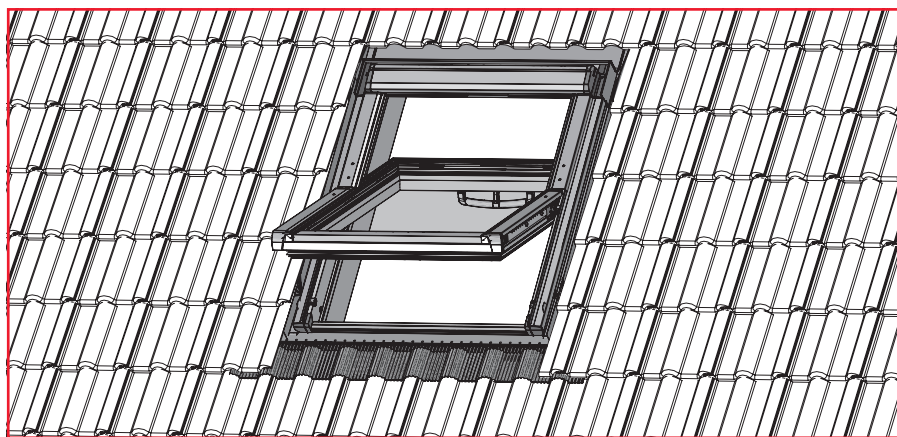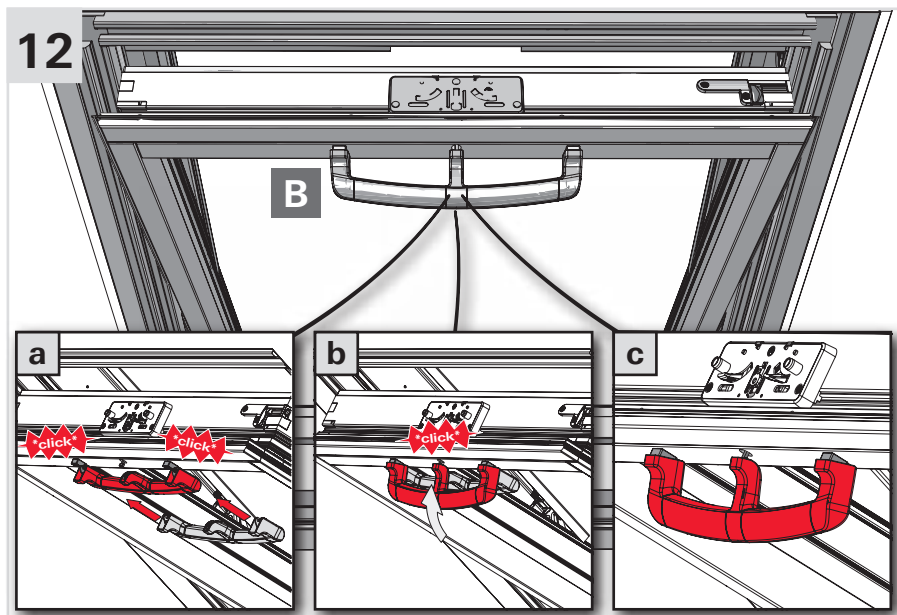

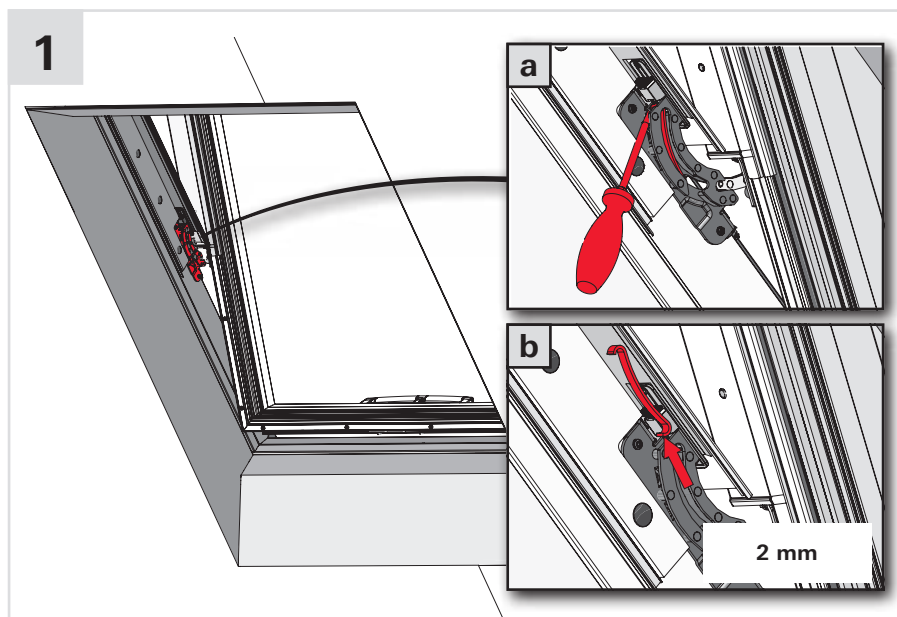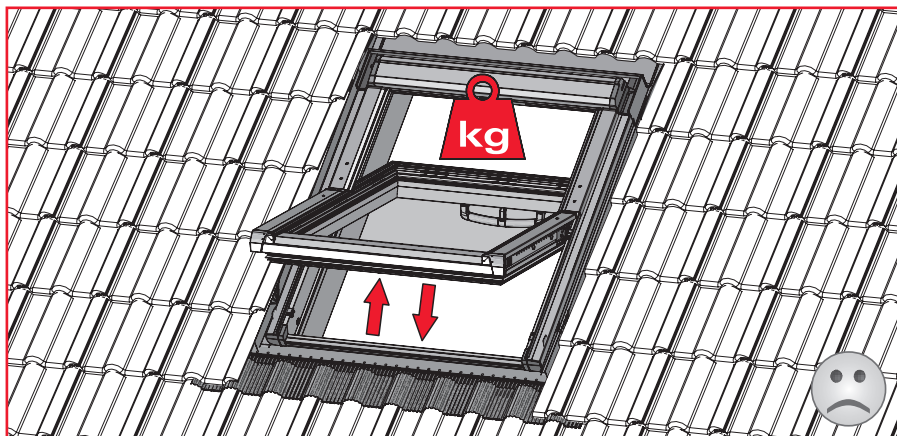


2



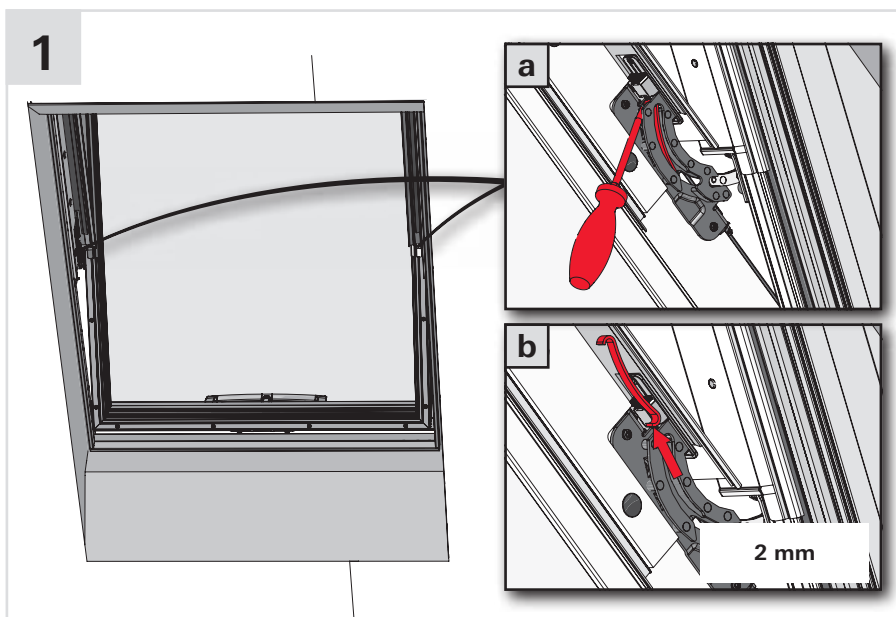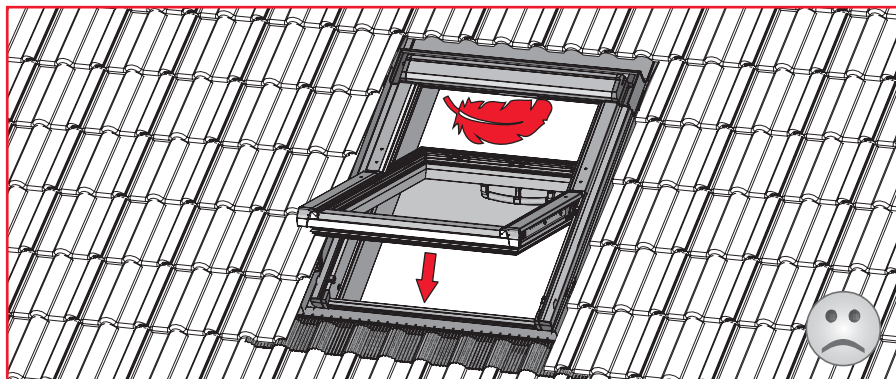


2


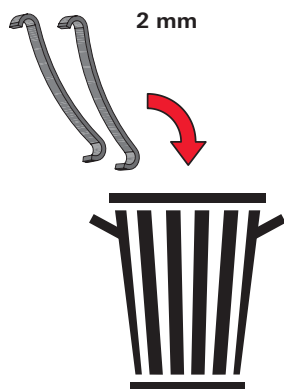




3



No. 736167

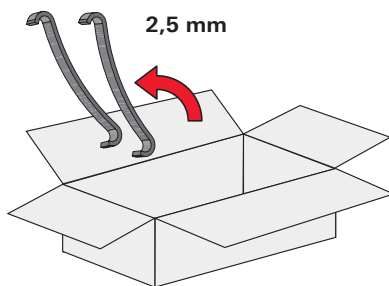



4

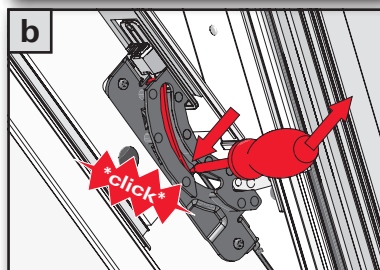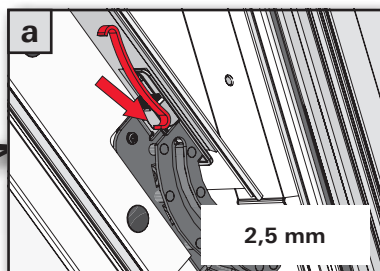

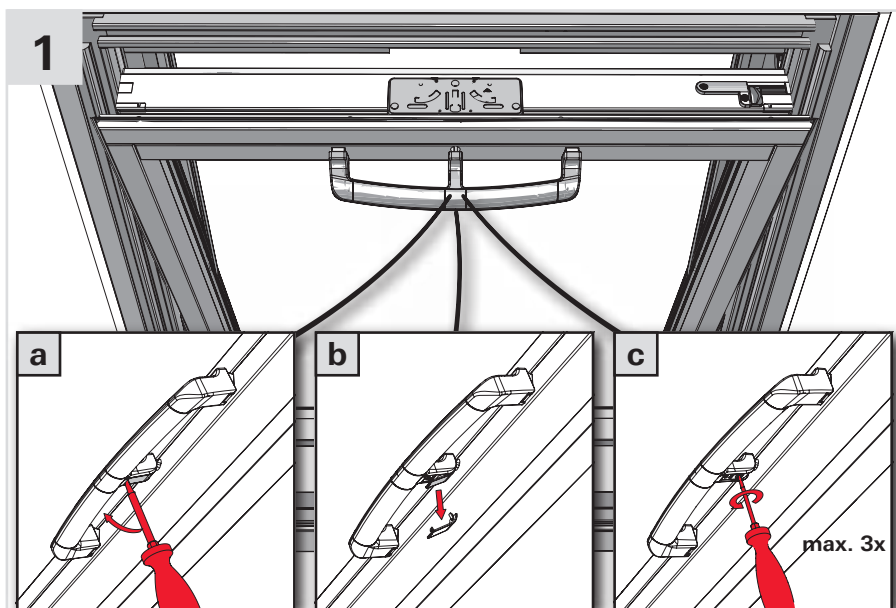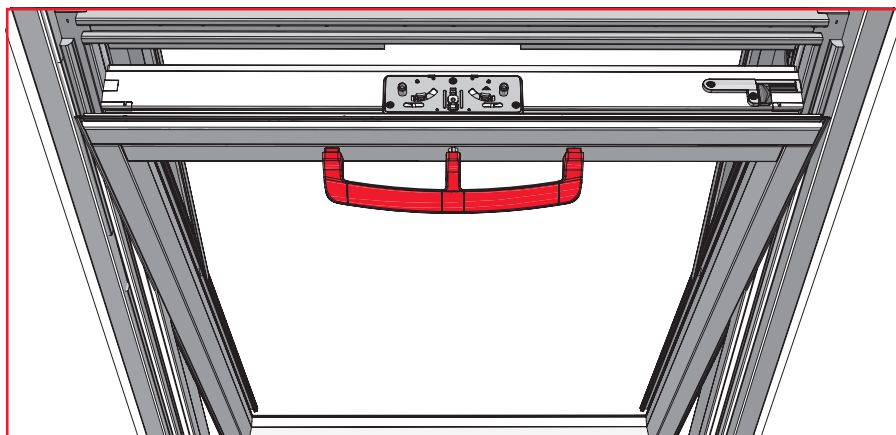

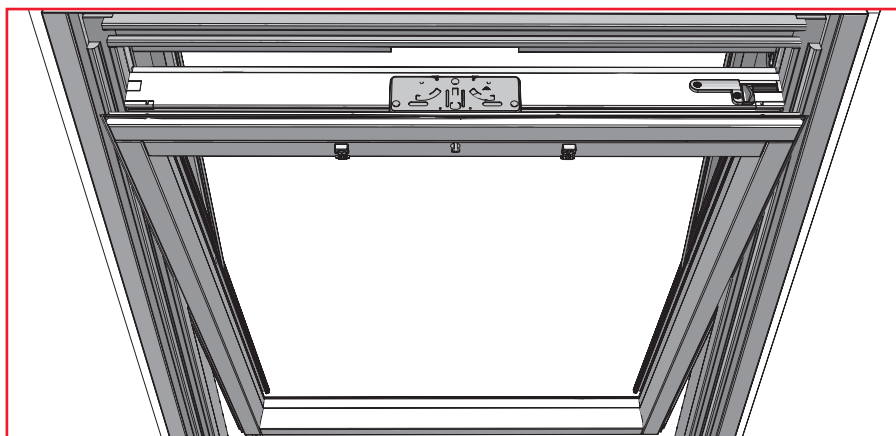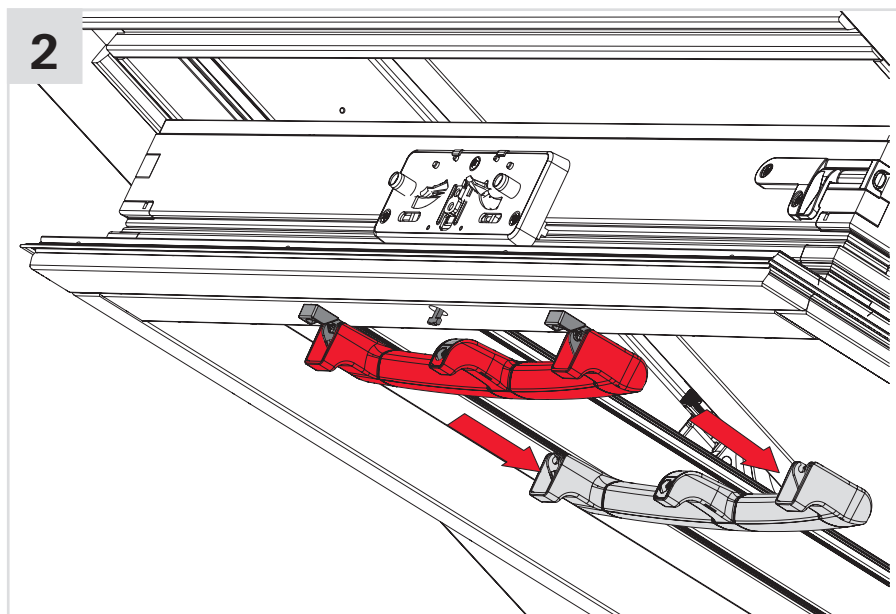

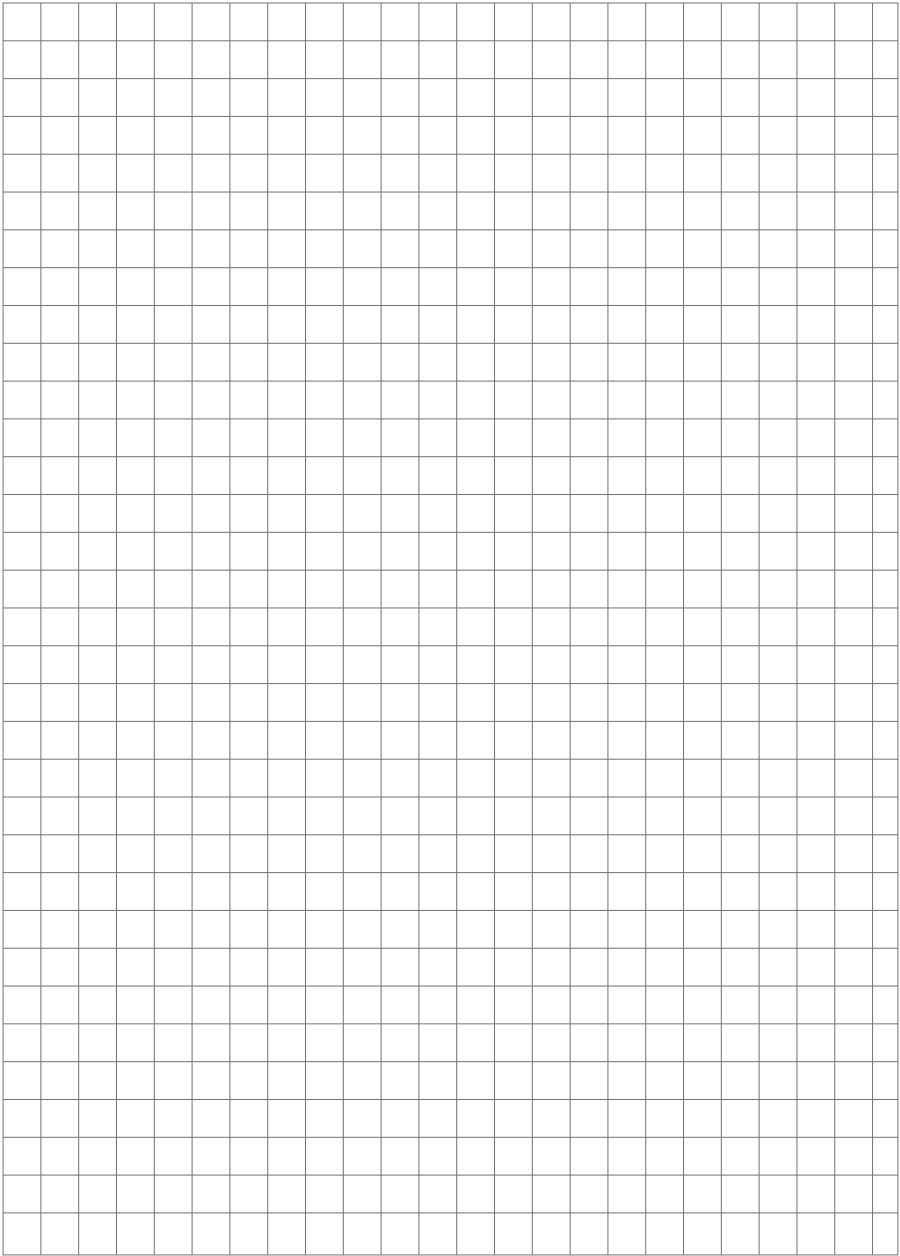

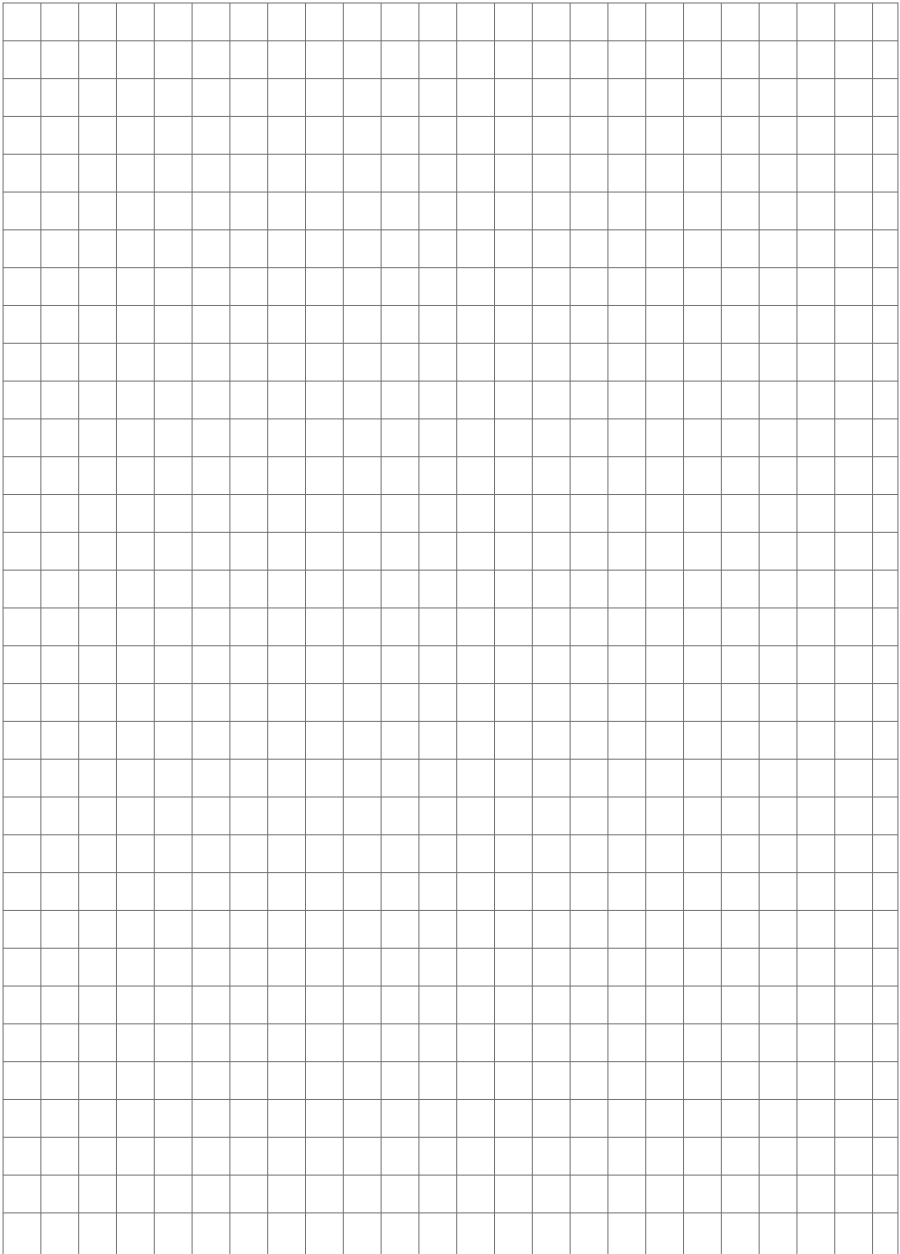



The roof window.



www.roto-contacts.com



www.roto-extra.com

Roto Frank DST Vertriebs-GmbH
Wilhelm-Frank-Straße 38-40
97980 Bad Mergentheim
Deutschland

